

## Using the Small Cleaning Card and Long T-shape Card

Thorough clean every 3 ribbons or every 3 months, whichever occurs first.

- 1 Turn off the printer, remove the ribbon, and shut the printer lid
- 2 Turn the printer on, When the LCD displaying “Initializing” push the EJECT button for 20 seconds, until the LCD displays “Cleaning...”
- 3 With the J230i, insert the small cleaning card into the feeder as far as possible, until it is taken by the printer and cleaning starts. (For the J200i insert the cleaning card into the front feed slot)
- 4 The card will move backwards and forwards inside the printer and is then ejected.
- 5 On the J230i open the feed hopper and insert the long T shape card as far as you can. For the J200i insert the long card into the feed slot, after cutting, see below.
- 6 Push the EJECT button again. The T shaped card will be taken into the printer to continue cleaning
- 7 After the long T shaped card has been ejected, “Ready” will be displayed on the LCD, indicating that the clean cycle is completed.
- 8 Leave the printer for 2-3 minutes before using, to give the alcohol time to evaporate.



**NOTE:** If you are using a Javelin J200i card printer, it is necessary to cut the long T-shape card where indicated on the diagram before inserting it into the printer.

